

Complete the instruction. Use the words:

airline              axle              compressor              dust cap              hub cap              jack  
tyre changer              valve              wheel balancer              wheel nuts  
wheel              hub cap              wheel nuts              tyre changer              axle

### Changing a tyre

- 1 Take the ..... off the wheel.
- 2 Loosen the ..... on the wheel with a box spanner.
- 3 Push the ..... under the car. Raise the end of the car.
- 4 Take the wheel nuts off the .....
- 5 Take the wheel off the .....
- 6 Use the ..... and take the tyre off the wheel.
- 7 Replace the ..... on the inside of the wheel.
- 8 Use the ..... and put the new tyre on the wheel.
- 9 Switch on the .....
- 10 Use the ..... and inflate the tyre.
- 11 Put the ..... on the valve.
- 12 Put the wheel on the ..... . Balance the wheel.
- 13 Put the wheel on the .....
- 14 Put the ..... on the wheel and tighten them.
- 15 Lower the car and put the ..... on the wheel.