

Flat Tire

1. Locate your spare tire and jack in the trunk of your vehicle.



2. Use the lug wrench to loosen the lug nuts on the wheel with the flat tire.



3. Use the jack to lift the wheel off of the ground.



4. Remove the lug nuts that you loosened prior to using the jack by using the lug wrench.



5. Lower the vehicle off of the jack by turning the handle in a counter clockwise fashion.