




Disconnect the motor mount bolts

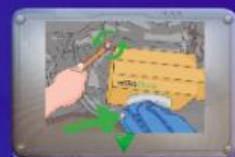


Unbolt the engine from the transmission



Remove the hood



Disconnect the intake, exhaust and coolant lines

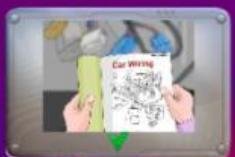

Disconnect the wiring



Either raise or lower the engine from the engine bay



Drain all fluids from the engine