



# Activity 11

Ibrahim is reviewing advanced computer problems.

Match the problems with the possible solutions.

Problem	Possible solution
Power button will not start a computer.	Check the harddrive is not close to maximum capacity. Where necessary defragment the harddrive and remove unnecessary files and applications to increase available storage.
An application is running slowly or unresponsive.	Install or update the driver software for the sound card.
The computer is unresponsive.	Use the software installation tool to restore the application to resolve software corruption issues on the harddrive then, restart the computer system.
The sound is not working.	Use a recovery disk to restore the operating system to resolve software corruption issues on the harddrive.

### Did you know?

You use engineering skills when you troubleshoot computer problems