

**1. Switch on the  
UPS**

**2. Switch on the  
monitor**

**3. Press the power  
button CPU**

**4. Switch on the  
main power**