

Display Button

Tripod Mount

Zoom In

Aperture/Erase Button

View Finder

Live View

Menu Button

LCD Screen

Card & Battery Cover

Battery Compartment

Playback Button

Dioptric Adjustment

Zoom Out

Quick Control

Card Slot

