




POSITION FOR ATTACHING SAFETY LABELS AND STORAGE OF OPERATION & MAINTENANCE MANUAL

Write the suitable title for each safety labels, and put the correct number to determine the position of it based on the following picture

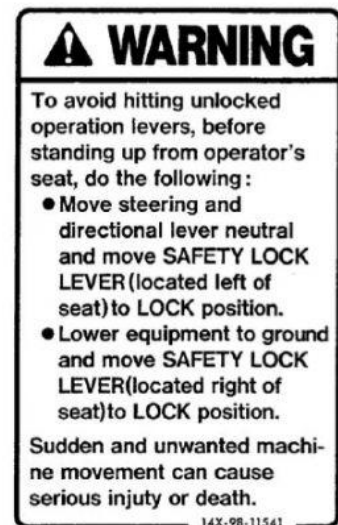

- Cautions for checking engine room
- Warnings for hot water hazard
- Warnings for adjusting track tension
- Warnings for leaving operator's seat
- Cautions before operating machine
- Warnings for hot oil hazard
- Warning to prevent entry during maintenance Display this sign around the bulldozer.
- Warning for ROPS

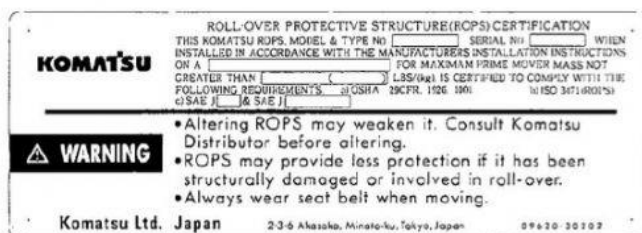

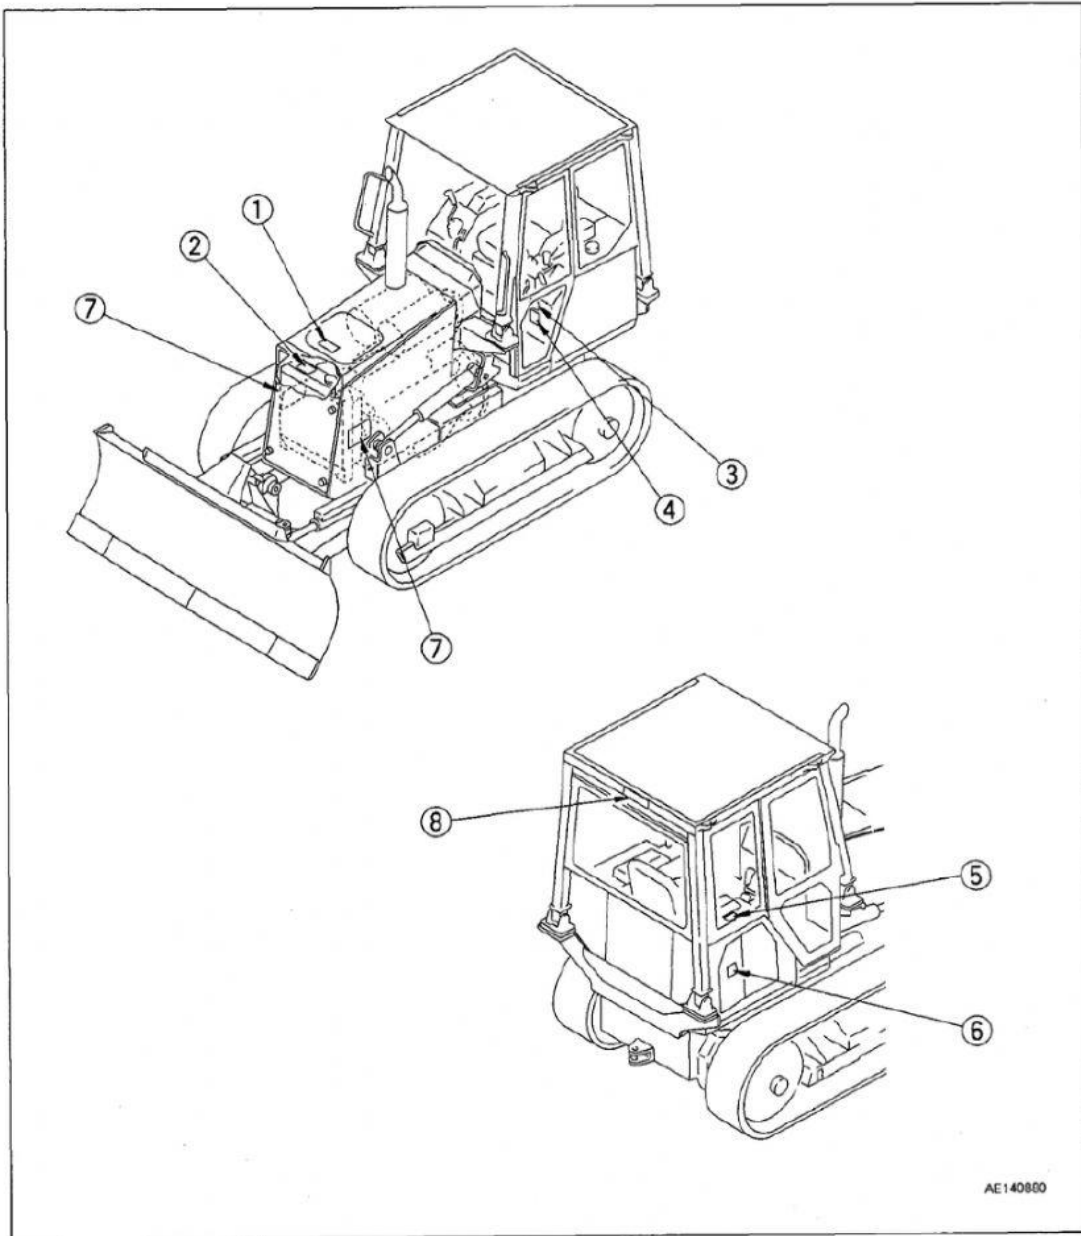

⚠ DANGER



Hazardous voltage hazard.
Serious injury or death can occur if machine or attachments are not kept safe distance away from electric lines.

	VOLTAGE	SAFE DISTANCE
LOW VOLTAGE	100V/200V	2m
	6,600V	2m
	22,000V	3m
SPECIAL HIGH VOLTAGE	66,000V	4m
	154,000V	5m
	187,000V	6m
	275,000V	7m
	500,000V	11m

09801-03001

⚠ WARNING



To prevent SEVERE INJURY or DEATH, do the following before moving machine or its attachments:

- Honk horn to alert people nearby.
- Be sure no one is on or near machine or in swing area.
- Rotate cab for full view of travel path if it can be done safely.
- Use spotter if view is obstructed.

Follow above even if machine is equipped with travel alarm and mirrors.

09802-03000

⚠ WARNING

Improper use of booster cables and battery cables can cause an explosion resulting in serious injury or death.

- Follow instructions in manual when using booster cable and battery cables.

09809-03000

⚠ WARNING

Improper operation and maintenance can cause serious injury or death.

Read manual and labels before operation and maintenance. Follow instructions and warnings in manual and in labels on machine.

Keep manual in machine cab near operator.
Contact Komatsu distributor for a replacement manual.

09651-03001

⚠ WARNING

To avoid hitting unlocked operation levers, lower equipment to ground and move LOCK LEVER (located near seat) to LOCK position before standing up from operator's seat.

Sudden and unwanted machine movement can cause serious injury or death.

09654-03001

⚠ WARNING

To open or close the front or ceiling window, never stand up from the operator's seat before throwing the lock lever to the LOCK position.

Inadvertently touching any of the working equipment control levers might cause the machine to start moving all of a sudden, probably resulting in a serious injury.

09839-03000

⚠ WARNING

Hot oil hazard.

To prevent hot oil from spurting out:

- Turn engine off.
- Allow oil to cool.
- Slowly loosen cap to relieve pressure before removing.

09653-03001

⚠ WARNING

Hot water hazard.

To prevent hot water from spurting out:

- Turn engine off.
- Allow water to cool.
- Slowly loosen cap to relieve pressure before removing.

09668-03001

⚠ WARNING



Compressed spring lubricator and grease are under hazardous high pressure and can cause serious injury or death.

- When adjusting track tension, only turn lubricator ONE TURN, turning lubricator further could cause lubricator and grease to fly off and hurt you. See manual for adjustment instructions.
- When loosening track shoe, if it does not loosen after turning lubricator ONE TURN, ask Komatsu dealer or distributor to disassemble.

09657-03003

⚠ WARNING

When raising window, lock it in place with lock pins on both sides.

Falling window can cause injury.

09803-03000

⚠ WARNING

Explosion hazard

- Keep away from flame
- Do not weld or drill

09659-53000

⚠ CAUTION

While engine is running:



1. Do not open cover.
2. Keep away from fan and fan-belt.

09667-03001




Start the engine only after sitting down in the operator's seat.

Do not attempt to start the engine by short-circuiting the engine starting circuit. Such an act may cause a serious bodily injury or fire.

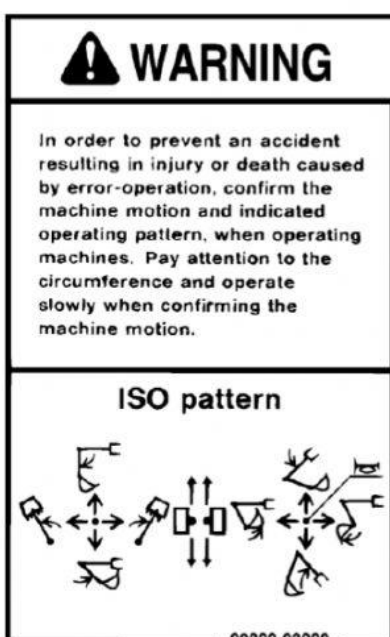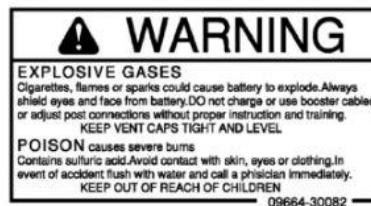

- Caution before operating or maintaining machine
- Caution before operating
- Caution for seat
- Caution for going close to electric cables
- Caution for operating pattern
- Caution when opening or closing front window
- Caution when stowing front window
- Caution for high-temperature hydraulic oil
- Caution for handling accumulator and gas spring
- Caution for adjusting track tension
- Caution for handling cable
- Caution with high-temperature coolant
- Stopping rotation for inspection and maintenance
- Emergency escape
- Caution against falling
- Caution against falling
- Caution against falling
- Prohibited to enter within swing range
- Be aware of work equipment
- Caution when handling battery
- Prohibition for jump start
- Engine hood lock

LOCATION OF SAFETY LABELS

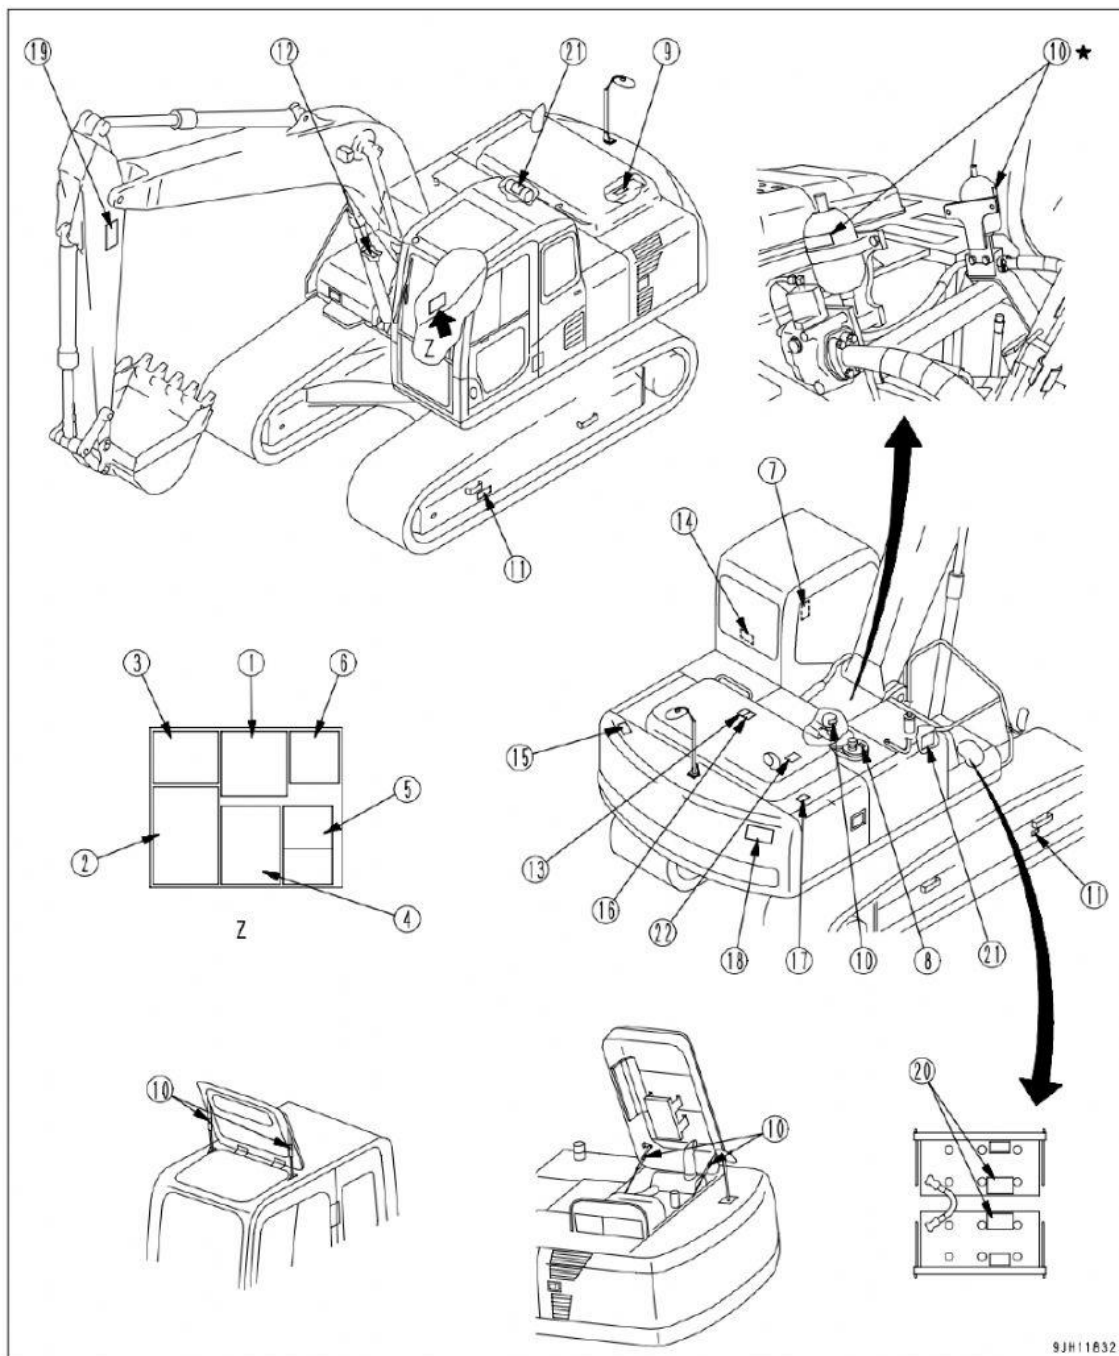

9JH11832

★: if equipped